


VICTORIAN REVIVAL BIRDHOUSE

Mounting Instructions

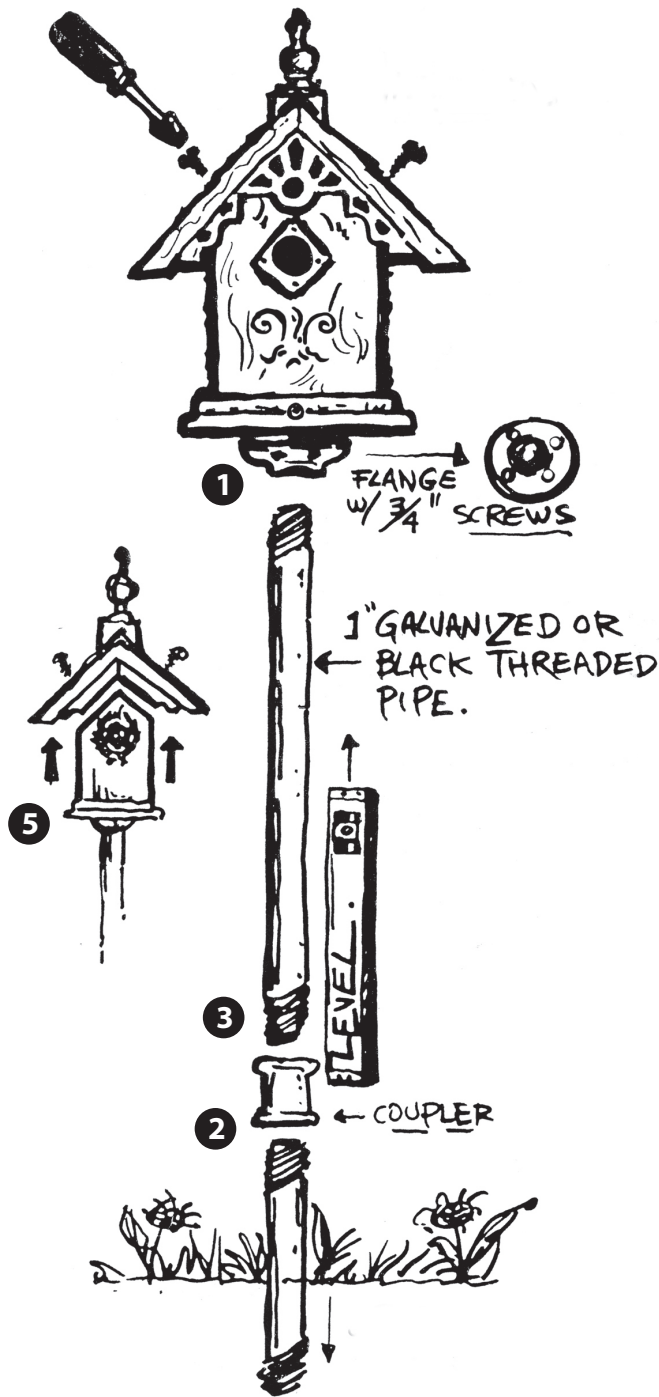


- 1 Attach 1" pipe flange, centered, to birdhouse bottom. Pre-drill with 1/8" drill bit and use 3/4" #12 screws.
- 2 Screw coupler onto lower pipe and hammer pipe into ground until stable. Check with a level or by eye. **Tip: Drive in pipe by hammering with a piece of wood on top to protect threads.**
- 3 Screw upper pipe into the coupler until snug, then screw the birdhouse onto pipe.
- 4 Finished height of the birdhouse should be approximately 6 feet. The height for feeder should allow for convenient maintenance and filling. Use your own height as a guide.
- 5 To remove roof, some predator proof models require a Phillips screwdriver (four screws). Newer models have a removable pin in back.

Mounting Kit Shopping List:

(Present this at your local hardware store or plumbing supply.)

Black Pipe Kit:

- One 1 inch flange
- Four 3/4 inch #12 screws
- One 1 inch coupler
- Two threaded 1 inch pipe sections:
One 2 foot section; one 5 foot section
Lubricate threads with WD-40 or Vaseline.

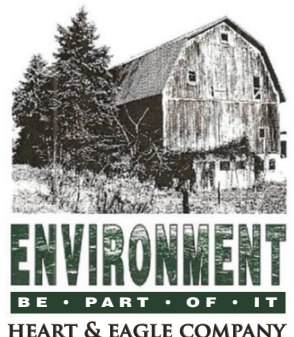

Victorianrevivalbirdhouses.com • 616-456-5991